WEGTRE WATER HEATER Imstallation Imstructions Optional safety Safety vent in header tank Vent SOLID FUEL WATER HEATER MUST ONLY BE FITTED TO OPEN Open Vented VENTED HOT WATER Low SYSTEMS pressure hot FITTING TO A MAINS water service PRESSURE SYSTEM IS EXTEMELY DANGEROUS AND **COULD LEAD TO AN EXPLOSION** Safety Vent PIPES TO HOT WATER MUST RISE AT 1 IN 20 AT ALL MAXIMUM HEAD TIMES Low Level Hot Flue water service Must be higher Use 20mm pipe than stove if heater is near hot water Must be low service use 25mm Smoke shelf for a larger pressure open horizontal Union vented type distance Fit heat exchanger to rear at base **Fixing** of stove **Bolt**